Toyota Fixed Price Servicing Content







| Free Visual Safety Report | ✓ | ✓ | ✓ |
|---|----------|----------|----------|
| Free Wash and Vac | ✓ | ✓ | ✓ |
| Check all pedal(s) and component(s) | ✓ | ✓ | ✓ |
| Check steering wheel | ✓ | ✓ | ✓ |
| Check horn | ✓ | ✓ | ✓ |
| Check washers | ✓ | ✓ | ✓ |
| Check wipers | ✓ | ✓ | ✓ |
| Check interior lights | ✓ | ✓ | ✓ |
| Check exterior lights | ✓ | ✓ | ✓ |
| Check warning lights | ✓ | ✓ | ✓ |
| Inspect air conditioning filter- replace as necessary* | ✓ | ✓ | ✓ |
| Check seat belts | ✓ | ✓ | ✓ |
| Drain engine oil | ✓ | ✓ | ✓ |
| Replace oil filter | ✓ | ✓ | ✓ |
| Refill engine oil | / | ✓ | ✓ |
| Check levels and refill as required | ✓ | ✓ | √ |
| Inspect suspension | / | ✓ | 1 |
| Inspect steering | | ✓ | √ |
| Inspect tyres | / | ✓ | ✓ |
| Inspect wheels | / | ✓ | / |
| Check and adjust tyre pressures | / | / | / |
| Inspect brake pads and discs | / | / | / |
| Torque tighten wheel nuts | / | / | / |
| Check radiator and condenser | | / | / |
| Check belts | / | <i></i> | |
| Check battery | | | 1 |
| Recheck for fluid leaks- underside and engine bay | | 1 | 1 |
| Recheck all levels | | | 1 |
| Reset service lights or monitor as required | | | 1 |
| Check alarms | | | 1 |
| Check and adjust gear cables | | | 1 |
| Inspect glass and light lenses | | | |
| Replace battery in locking remote | | 1 | 1 |
| Check and inspect suspension ball free play | | | |
| Replace front and rear differential oils (model dependant)* | | | 1 |
| Inspect drive shaft boots | | | |
| Inspect suspension ball joints and dust covers | | 1 | 1 |
| Inspect fuel and brake pipes | | | |
| Inspect exhaust pipes | | _/ | |
| Inspect wheel bearing | | ./ | ./ |
| Inspect brake lining and drums | | / | ./ |
| Inspect hand brake | | | 1 |
| Check clutch fluid as required* | | | |
| Inspect spark plugs | | | |
| Inspect air filter | | / | / |
| Inspect charcoal canister (model dependant) | | ./ | ./ |
| Check fuel cap & lines | | V | / |
| 4-wheel alignment check- extra charge for adjustment | | | V |
| Change brake fluid (every two years)* | | V | V / |
| Replace air filter (model dependant) | | / | / |
| Check transmission oil* | | V | V / |
| Inspect transfer box oil (model dependant)* | | / | / |
| Lubricate prop shaft joints (model dependant) | | V | V / |
| Tighten prop shaft bolts (model dependant) | | / | / |
| | | ✓ | V |
| Replace diesel fuel filter (model dependant) | | | V |
| Replace spark plugs | | | √ |
| Check valves | | | √ |
| Clean airflow meter Diesel smoke test | | | √ |
| | | | |

^{*}Additional charges apply if work is required